


Procedure for Switching to DG535, external Signal Delay Generator

Move **BNC 1** from "External Trigger" of the triggering unit to "trigger" on the DG535.

BNC 2 should run from "A+B" on the DG535 to the "External Trigger" of the triggering unit.

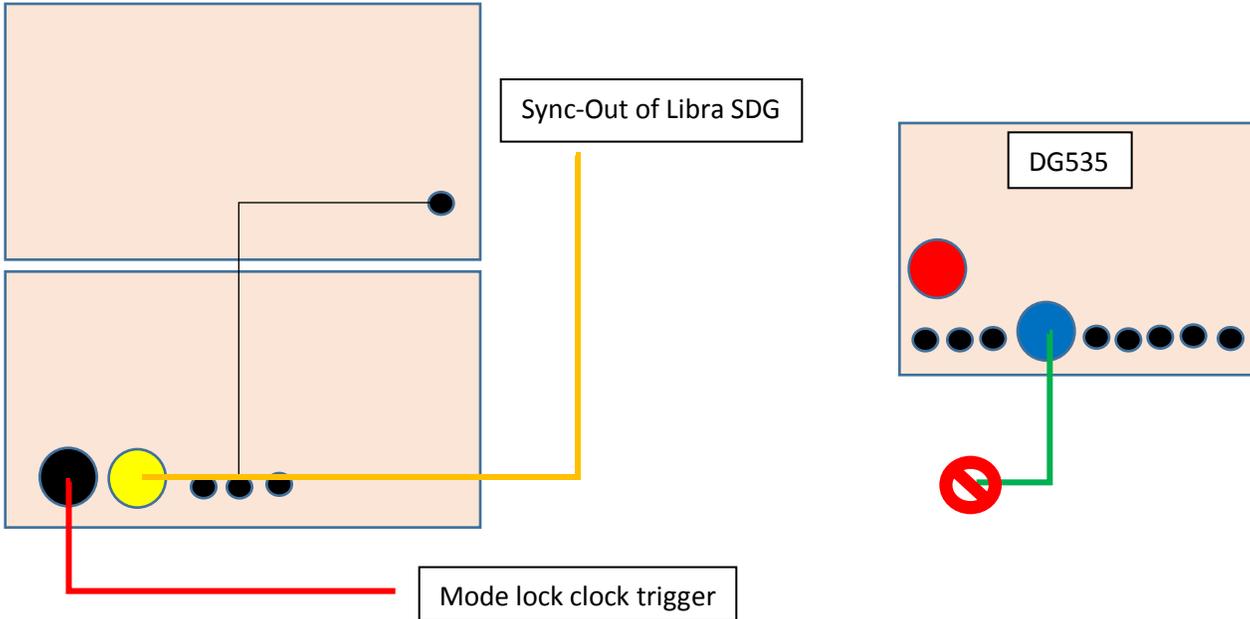

Big Black:	Mode Lock Clock	Orange:	BNC 1
Yellow:	External Trigger	Green:	BNC 2
Red:	Trigger		
Blue:	A+B		

